



How to Measure Centerline for Shower Doors

Get an Error-Free Installation

Ordering the correct size is the first step to a proper installation. The drawings presented here are designed to help you enter the correct information when purchasing your new shower door.

Please take a moment to review carefully. We can never have too much information about your application.

Required Measuring Tools

4-ft Level, 2-ft Level, Tape Measure, Pencil

How to Measure


- Measuring must be done after finished wall material is in place.
- Measure each width or centerline (middle of threshold) as shown in the illustrations to the right. Remember to allow for the body of your tape measure.
- Measure the maximum height available from the top of tub deck or threshold to top of tile.
- Check all surfaces and walls for plumb & level. If any surface is out of plumb or level by 3/8-in or more, a tapered filler is should be ordered to ensure a proper fit.

Centerline Measurements: Explained

The term “centerline measurements” sounds confusing but is easy to explain. The centerline refers to the position on the threshold of your tub or shower where the shower door will sit. Using centerline measurements ensures that your new shower door looks perfect in your shower.

Centerline for Inline (straight) Shower Doors

This illustration represents a typical shower or bathtub threshold. The dashed line is the centerline of the threshold.

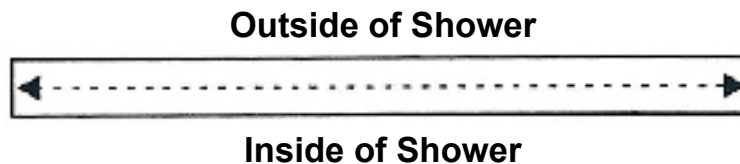

Centerline for Neo-Angle Shower Doors

This illustration shows the centerline for a neo-angle threshold.

